


TOURMASTER 4100/4212 FOOTSWITCH PINOUT

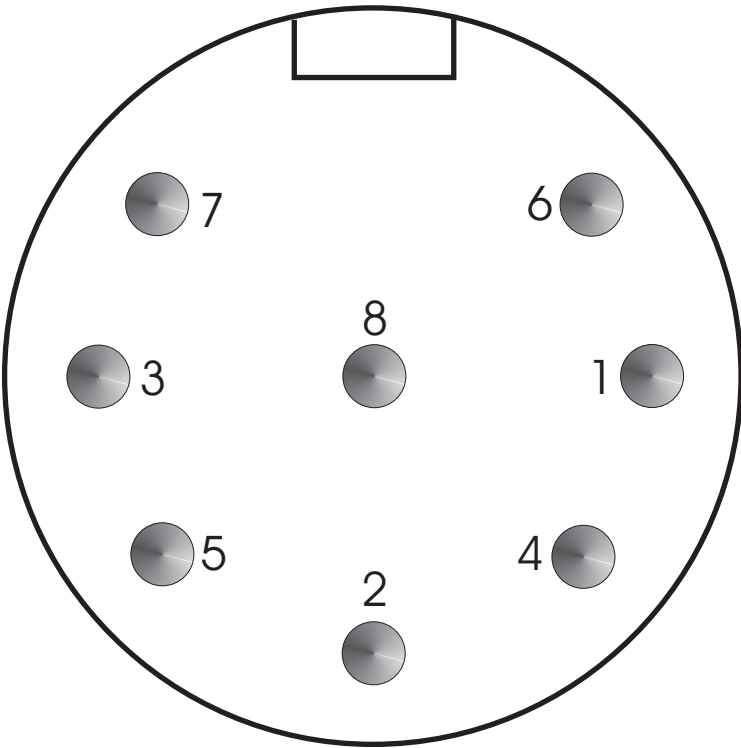

- PIN 1....12VDC
- PIN 2....CHANNEL SELECT A
- PIN 3....CHASSIS GROUND
- PIN 4....CHANNEL SELECT B
- PIN 5....REVERB (CLOSED = MUTE)
- PIN 6....SENSE (CLOSE TO ENABLE REMOTE CHANNEL SELECT FUNCTION)
- PIN 7....LOOP (CLOSE = LOOP ON)
- PIN 8....NO CONNECTION

CHANNEL SELECT FUNCTIONS				
	CV1	CV2	OD1	OD2
PIN 2 (A)	OPEN	OPEN	CLOSE	CLOSE
PIN 4 (B)	OPEN	CLOSE	OPEN	CLOSE